


# RÜCKENPOLSTER




Back pad / Dorsale / Almohadilla de espalda / Imbottitura dorsale

Art.Nr: 30165-300


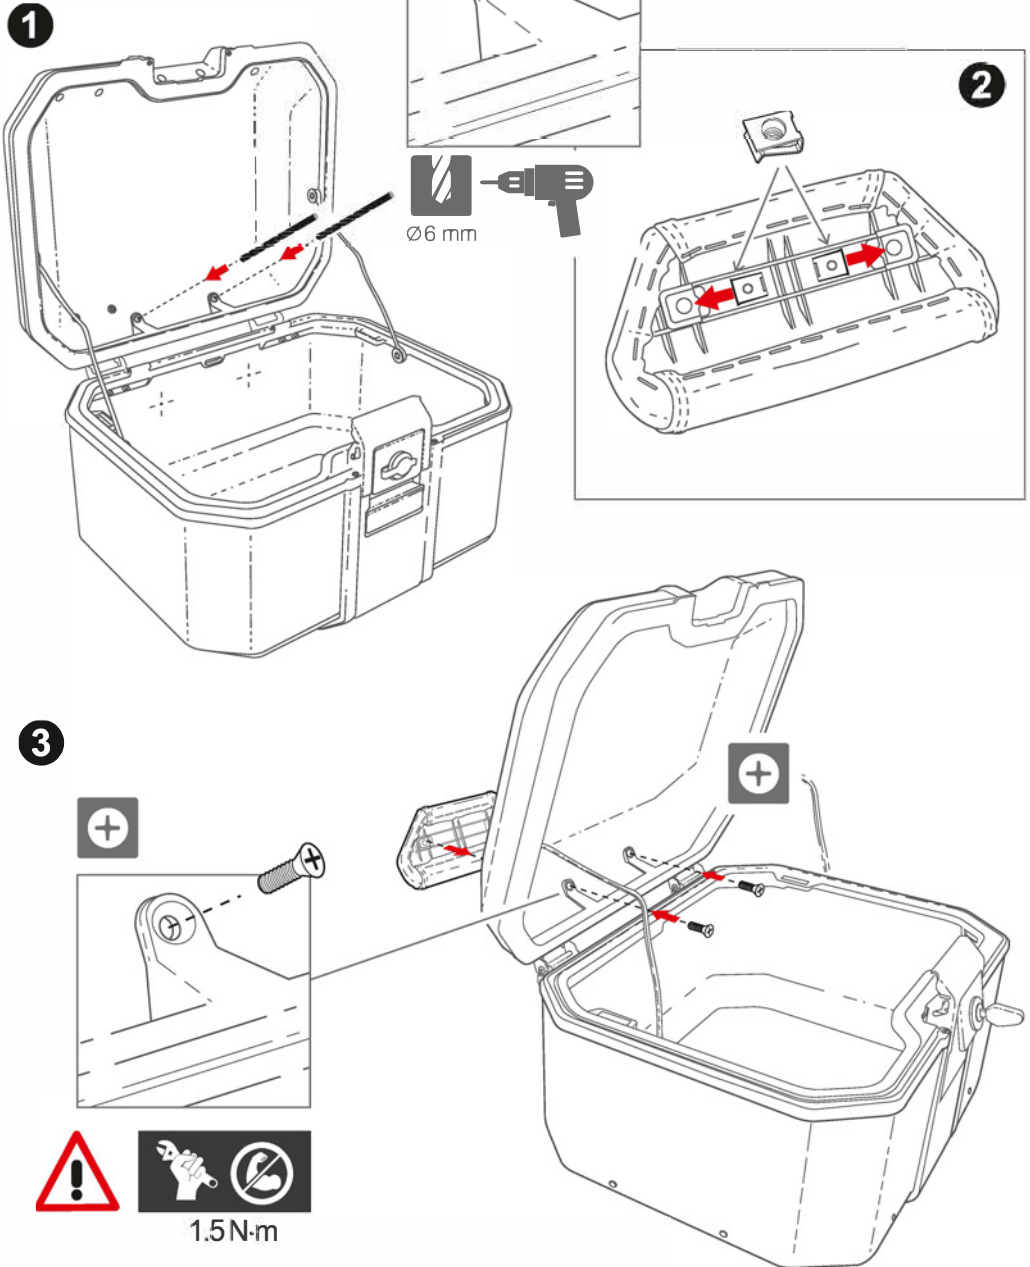




An der vorhandenen Einkerbung bohren.  
Drill at the existing notch.  
Percer à l'encoche existante.

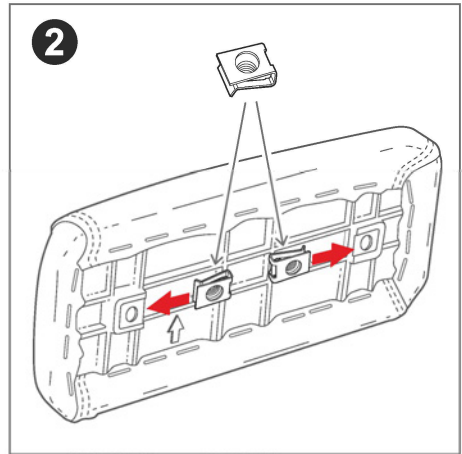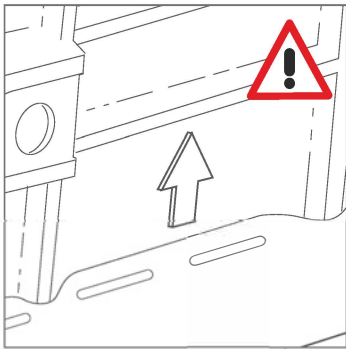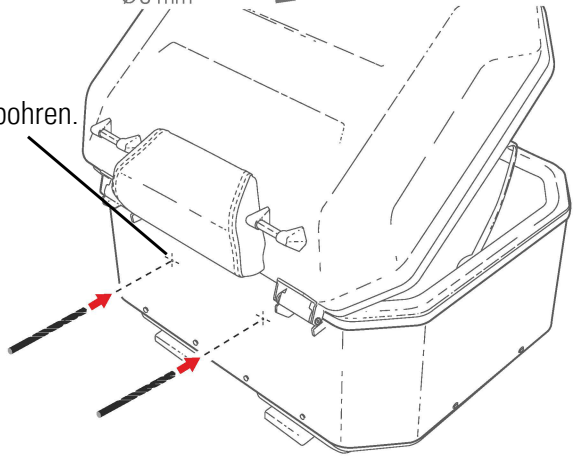

3

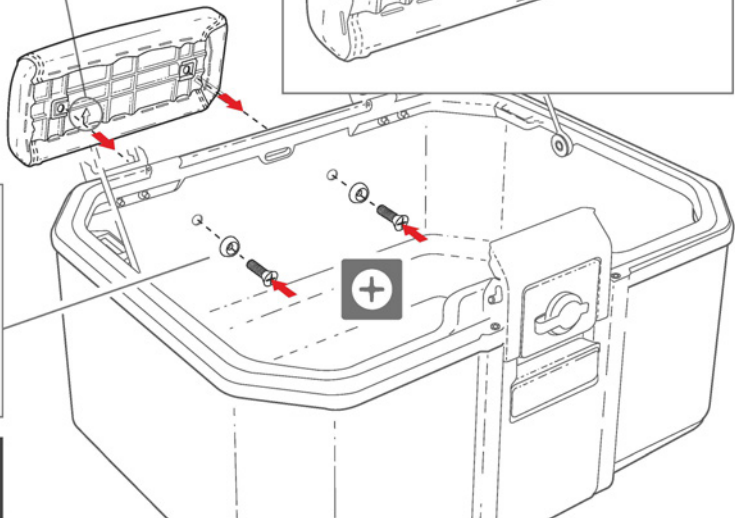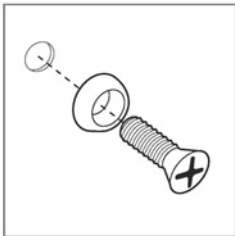

1N-m